OVEN PARTS

For Models:GSC308PJB4, GSC308PJQ4, GSC308PJT4, GSC308PJS4
(Black) (White) (Biscuit) (Black Stainless)

30" BUILT−IN ELECTRIC COMBO SENSOR/SC
(GOLD LINE)

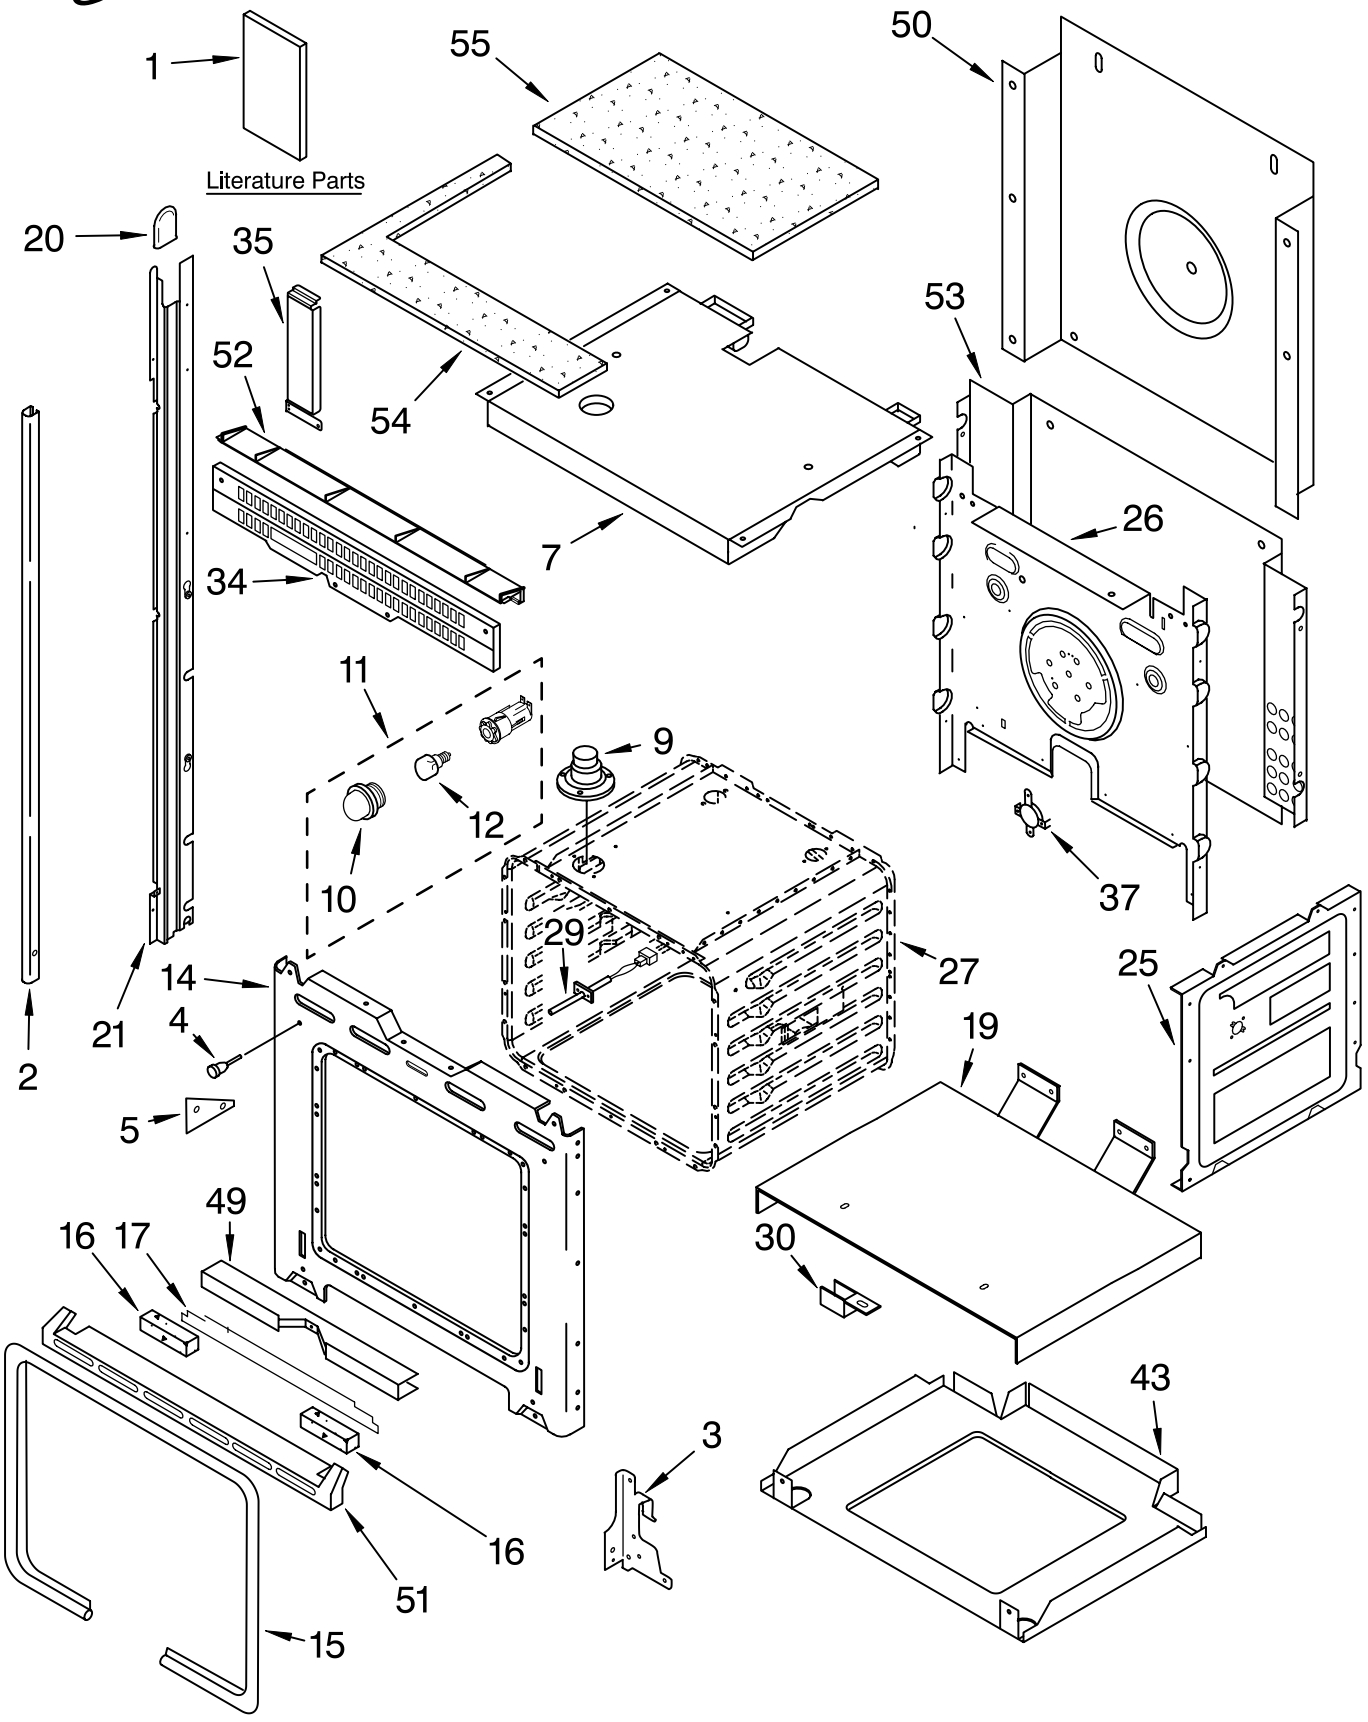

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models:GSC308PJB4, GSC308PJQ4, GSC308PJT4, GSC308PJS4
(Black) (White) (Biscuit) (Black Stainless)

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1		Literature Parts
	LIT8300653	Installation Instructions Use & Care Guide
	LIT8300346	Microwave
	LIT8300669	Oven Cooking Guide (Label)
	LIT8300348	Oven
	LIT8300349	Microwave
	LIT8300283	Tech Sheet (Oven)
	LIT3191638	Safer Cooking Tips
	LIT4449237	Cookbook
2		Trim, Side
	4455430	RH Black
	4455432	RH White
	4455434	RH Biscuit
	4452083	RH Black stainless
	4455431	LH Black
	4455433	LH White
	4455435	LH Biscuit
	4452084	LH Black Stainless
	694091	Screw
3		Hinge, Receiver
	4455605	Left Hand
	4455606	Right Hand
4	4448520	Bumper, Door
5	4455509	Bracket, Support
7	4455865	Top, Chassis
	4449809	Screw
9	4452158	Tube, Vent
	3196176	Screw
10	4452165	Lens, Light
11	4452368	Oven Light Assy
12	4452166	Bulb, Light
14	4455612	Frame, Front
	4449040	Scre
15	4455382	Gasket, Door
16	4452490	Spacer, Foam
17	4452337	Insulation, Bottom Vent
19	4451478	Support, Insulation
	4449809	Screw
20	4451605	Cap, Spacer
21		Rail, Side
	4450583	Right Side
	4450584	Left Side
	4448444	Grommet
	4449154	Screw
25	4455641	Side, Chassis (R.H. & L.H.)
	4449809	Screw
26	4452234	Back, Chassis
	4449809	Screw
27		Liner, Oven (Not Serviceable)
29	4455636	Sensor
	4449154	Screw
30	4449845	Bracket, Support
	4449809	Screw
34	4451667	Vent, Center
	4450038	Screw
35	4449906	Ext−Filler
37	4451442	Thermostat (TOD) (Temp.) SPST
	4449809	Screw
43	4455530	Base, Chassis
	4449809	Screw
49	4448933	Retainer, Gasket
	4449154	Screw
50	4451747	Cover, Back
	4449809	Screw
51		Trim, Bottom
	4455443	Black
	4455445	White
	4455447	Biscuit
	4455147	Black Stainless
	4450289	Screw
52	4450791	Vent, Control
53	4451756	Chassis, Back
	4452152	Bracket, Mounting Bottom Trim
54	4452492	Insulation, Top
55	4452491	Insulation, Grill

FOLLOWING PARTS NOT ILLUSTRATED

INSULATION

4449316	Insulation, Wrap
4450365	Insulation, Back

CONTROL PANEL PARTS

For Models:GSC308PJB4, GSC308PJQ4, GSC308PJT4, GSC308PJS4
(Black) (White) (Biscuit) (Black Stainless)

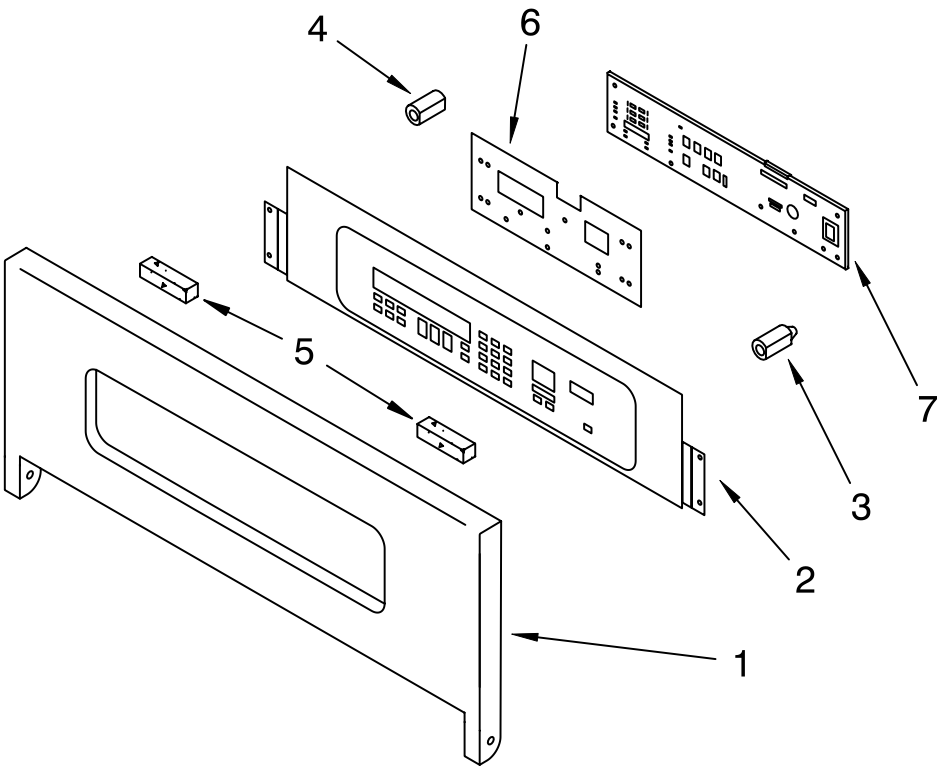

Illus. No.	Part No.	DESCRIPTION
1		Control Panel Assy
	4452604	Black
	4451791	Black Stainless
	4452605	White
	4452974	Biscuit
2		Switch Membrane
	8300550	Black
	8300548	White
	8300552	Biscuit
	3400832	Screw
3	4452248	Insulator, Board
4	4452249	Insulator, Board Support
5	4452260	Spacer, Foam
6	4452345	Insulator, Dialectric
7	8300245	Microcomputer
	3400406	Screw

OVEN DOOR PARTS

For Models:GSC308PJB4, GSC308PJQ4, GSC308PJT4, GSC308PJS4
(Black) (White) (Biscuit) (Black Stainless)

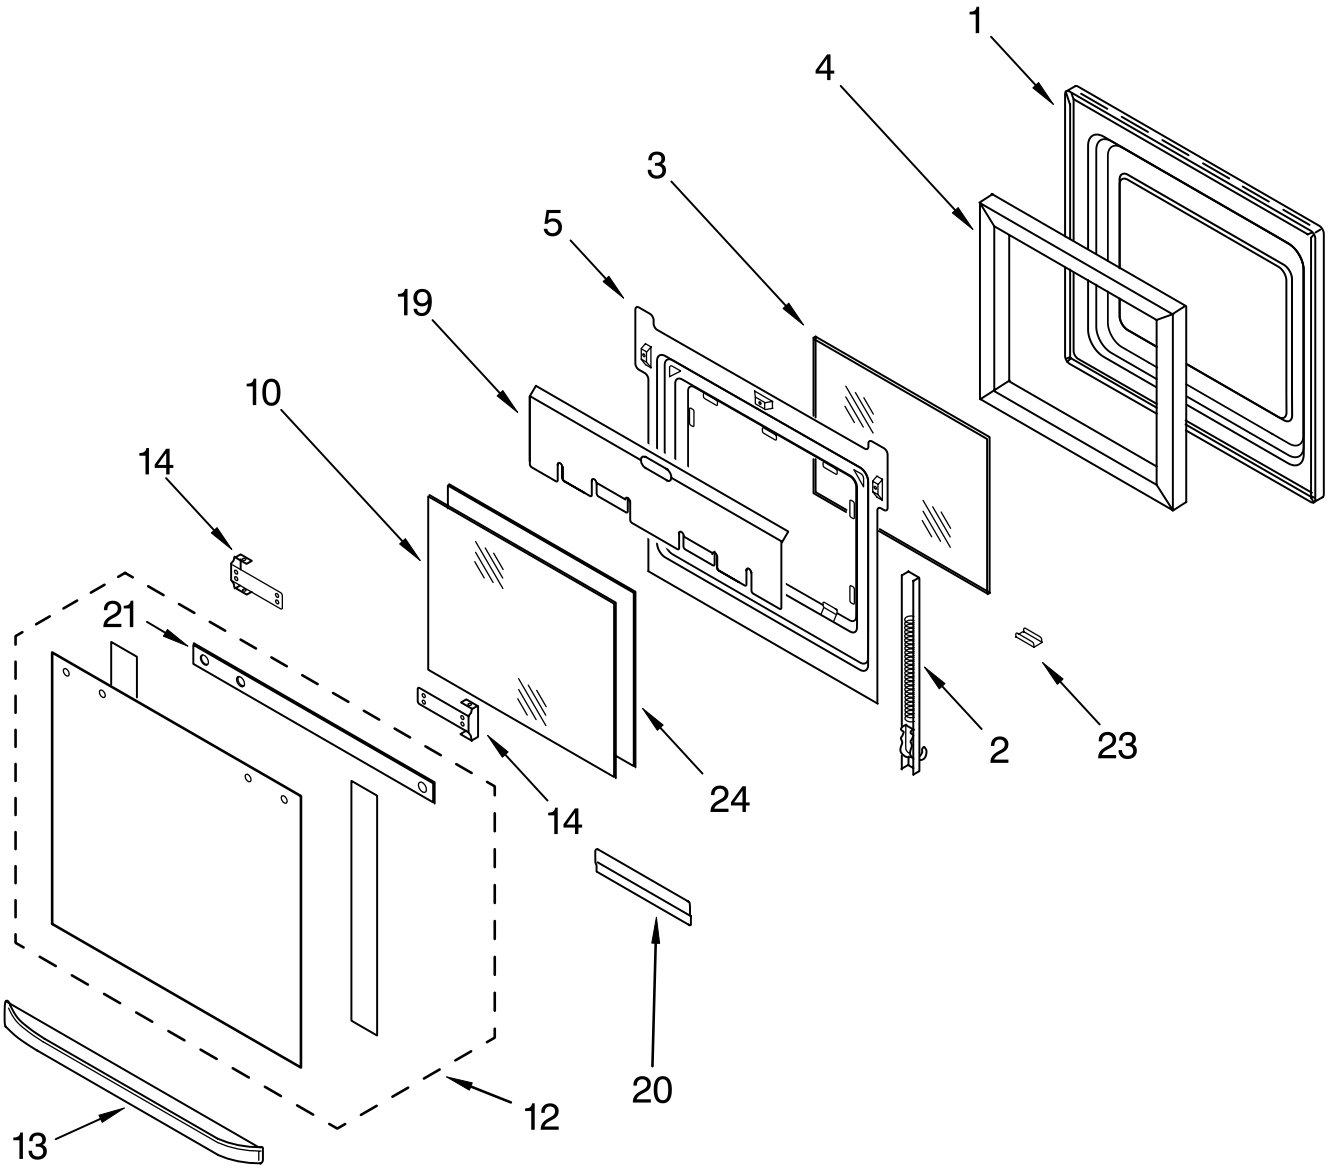

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1	4455618	Door Liner
2		Hinge, Door
	8300571	R.Side
	8300572	L.Side
		Hinge, Door For Stainless Model
	8300573	R.Side
	8300574	L.Side
	4449743	Screw
3	4449259	Glass, Inner
4	4451722	Insulation, Door And Bottom Door
5	8300778	Retainer, Glass
	4449809	Screw
10	4449263	Glass, Inner
12		Door Glass
	4452065	Black Model
	4452066	White Model
	4452479	Black Stainless
	4452859	Biscuit
13		Door Handle
	4448854	Black
	4448855	White
	4452860	Biscuit
14	4450813	Bracket, Handle
	4451040	Screw
19	4450362	Shield, Heat
	4449809	Screw
20	4451668	Retainer, Glass−Clip
	4449809	Screw
21	8300820	Seal, Door Top
23		Retainer, Glass
	4450863	Black
	4450864	White
	4452119	Biscuit
24	4455257	Glass, Inner

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

LATCH PARTS

For Models:GSC308PJB4, GSC308PJQ4, GSC308PJT4, GSC308PJS4
(Black) (White) (Biscuit) (Black Stainless)

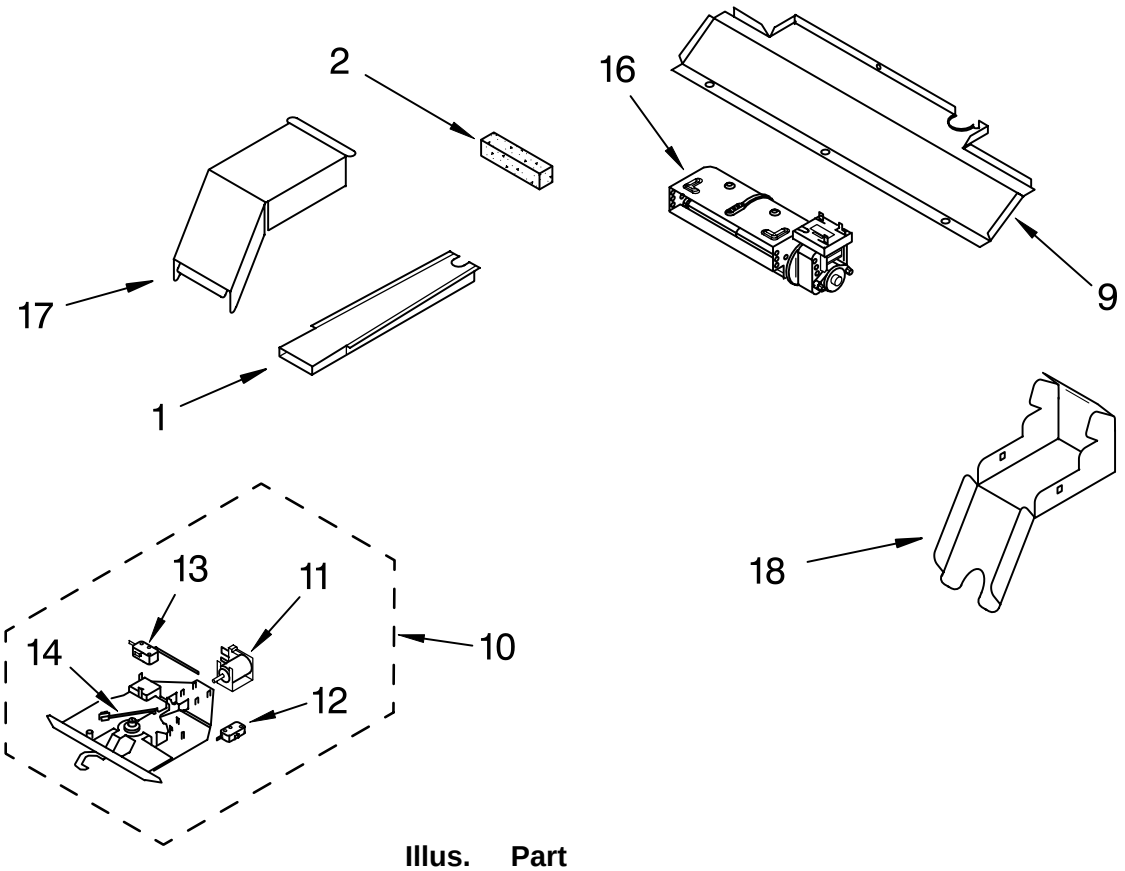

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1	4451759	Vent, Exhaust
	4449040	Screw
2	4451758	Seal, Foam
9	4450408	Baffle, Rear
	4449154	Screw
10	8300960	Latch Assy.
11	4451663	Solenoid
12	4452312	Micro Switch N.C.
13	4451426	Micro Switch
14	4451537	Spring, Latch
16	6610168	Blower
17	4455178	Vent, Top
18	4455177	Vent, Bottom

INTERNAL OVEN PARTS

For Models:GSC308PJB4, GSC308PJQ4, GSC308PJT4, GSC308PJS4
(Black) (White) (Biscuit) (Black Stainless)

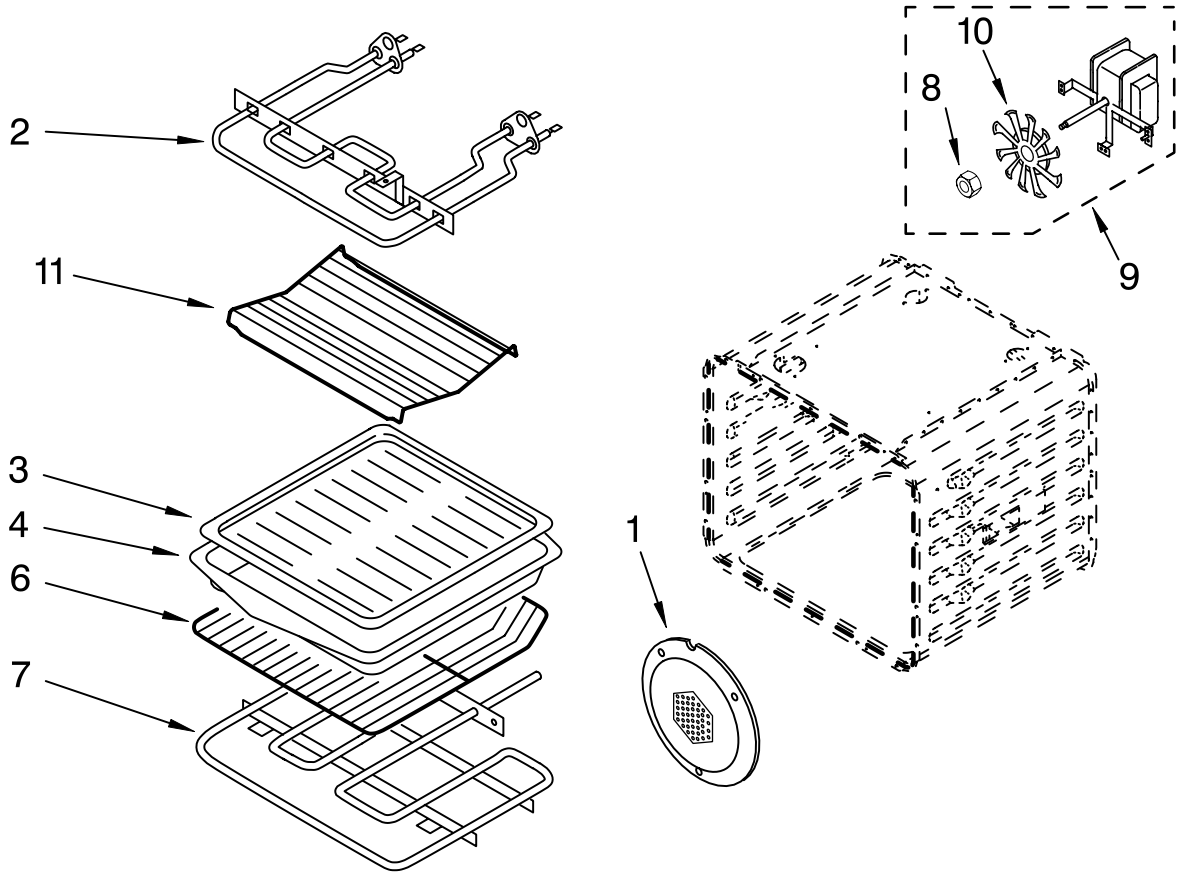

Illus. No.	Part No.	DESCRIPTION
1	4448988	Cover, Fan
	4449154	Screw
2	4452154	Element, Broil
	4449154	Screw
3	3147563	Grill, Broiler
4	3147845	Pan, Broiler
6	4448717	Rack, Oven
7	4452153	Element, Bake
8	4452227	Nut
9	4451583	Convection Motor
10	4452226	Fan Blade
11	3181534	Rack, Roasting

CABINET AND STIRRER PARTS

For Models:GSC308PJB4, GSC308PJQ4, GSC308PJT4, GSC308PJS4
(Black) (White) (Biscuit) (Black Stainless)

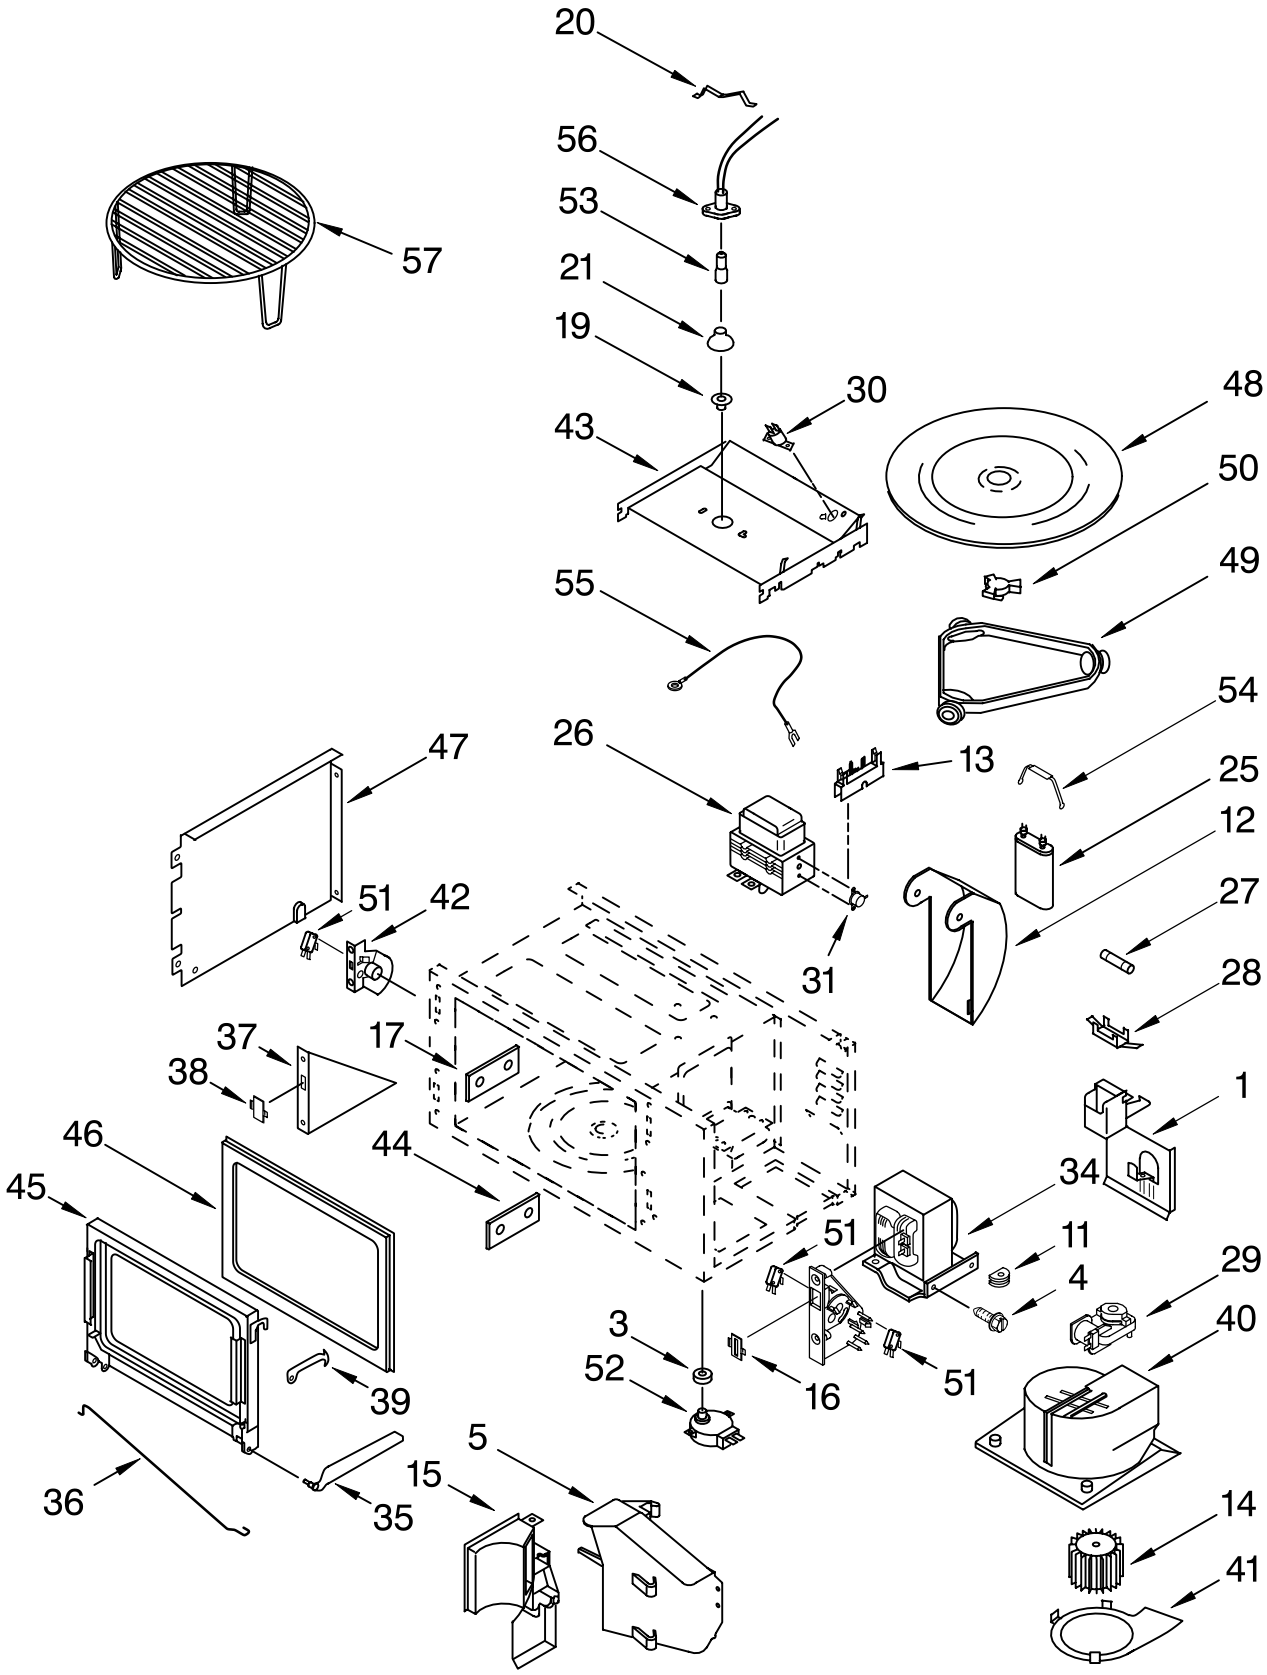

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET AND STIRRER PARTS

For Models:GSC308PJB4, GSC308PJQ4, GSC308PJT4, GSC308PJS4
(Black) (White) (Biscuit) (Black Stainless)

Illus. No.	Part No.	DESCRIPTION
1	4375299	Bracket, Capacitor
3	4375037	Rubber Ring
4	4375038	Screw
5	4375314	Air Duct, Magnetron
11	4375315	Damper
12	4375260	Duct, Inlet
13	4375316	Insulation, Switch
14	4375322	Fan Wheel
15	4375317	Duct, Air
16	4375264	Block, Side
17	4375248	Cover Plate, Upper
19	4375318	Lens, Lamp
20	4375319	Spring
21	4375320	Reflector
25	4375020	Capacitor
26	4375072	Magnetron
27	4375321	Fuse
28	4375231	Block, Fuse
29	4375278	Motor, Blower
30	4375279	Thermostat
31	4375079	Thermostat
34	4375286	Transformer
35		Hinge, Door
	4375323	Left
	4375324	Right
36	4451009	Torison Spring
	4452396	Black Stainless Model
37		Bracket, Hinge
	4375327	Left
	4375328	Right
38	4375329	Inlet
39	4375330	Door Strap
40	4375333	Fan Cap
41	4375334	Fan Cap Bottom
42		Switch Holder
	4375335	Left
	4375336	Right
43	4375337	Isolation Plate
44	4375338	Cover Plate
45	4375339	Door Plate
46	4375340	Inner Frame
47		Side Plate
	4375341	Left
	4375342	Right
48	4375343	Turntable
49	4375344	Ring Assembly
50	4375345	Shaft
51	4375346	Switch
52	4375347	Motor, Turntable
53	4375348	Lamp
54	4375349	Rectifier
55	4375350	Cable
56	4375351	Lamp Holder
57	4452220	Rack, Convection Microwave

IMPORTANT
PRODUCT SAFETY INFORMATION

ADVISE CONSUMERS OF AN ELECTROCUTION HAZARD WITH DO – IT – YOURSELF REPAIRS OF MICROWAVE OVENS.

The U.S. Consumer Product Saftey Commission warns against do – it – yourself repairs of microwave ovens. Microwave ovens use high voltage which makes it particularly hazardous for consumers to remove the cover and touch electrical parts.

STRONGLY RECOMMEND THAT CONSUMERS HAVE PROFESSIONALS REPAIR MICROWAVE OVENS.

MICROWAVE COMPARTMENT PARTS

For Models:GSC308PJB4, GSC308PJQ4, GSC308PJT4, GSC308PJS4
(Black) (White) (Biscuit) (Black Stainless)

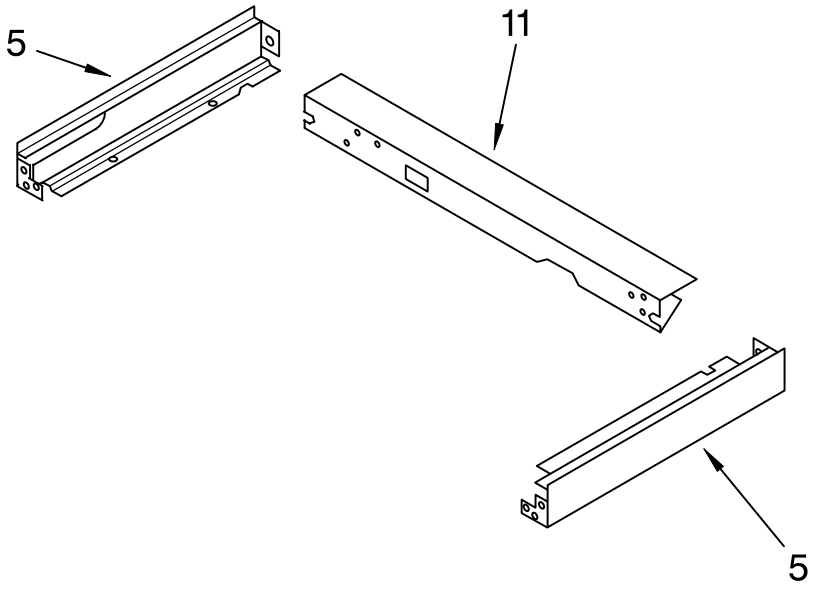

Illus. No.	Part No.	DESCRIPTION
5		Support Rails
	4452551	Right Side
	4452552	Left Side
	4449809	Screw
11	4452548	Rear Channel
	4449809	Screw
	4449154	Screw

MICROWAVE DOOR PARTS

For Models:GSC308PJB4, GSC308PJQ4, GSC308PJT4, GSC308PJS4
(Black) (White) (Biscuit) (Black Stainless)

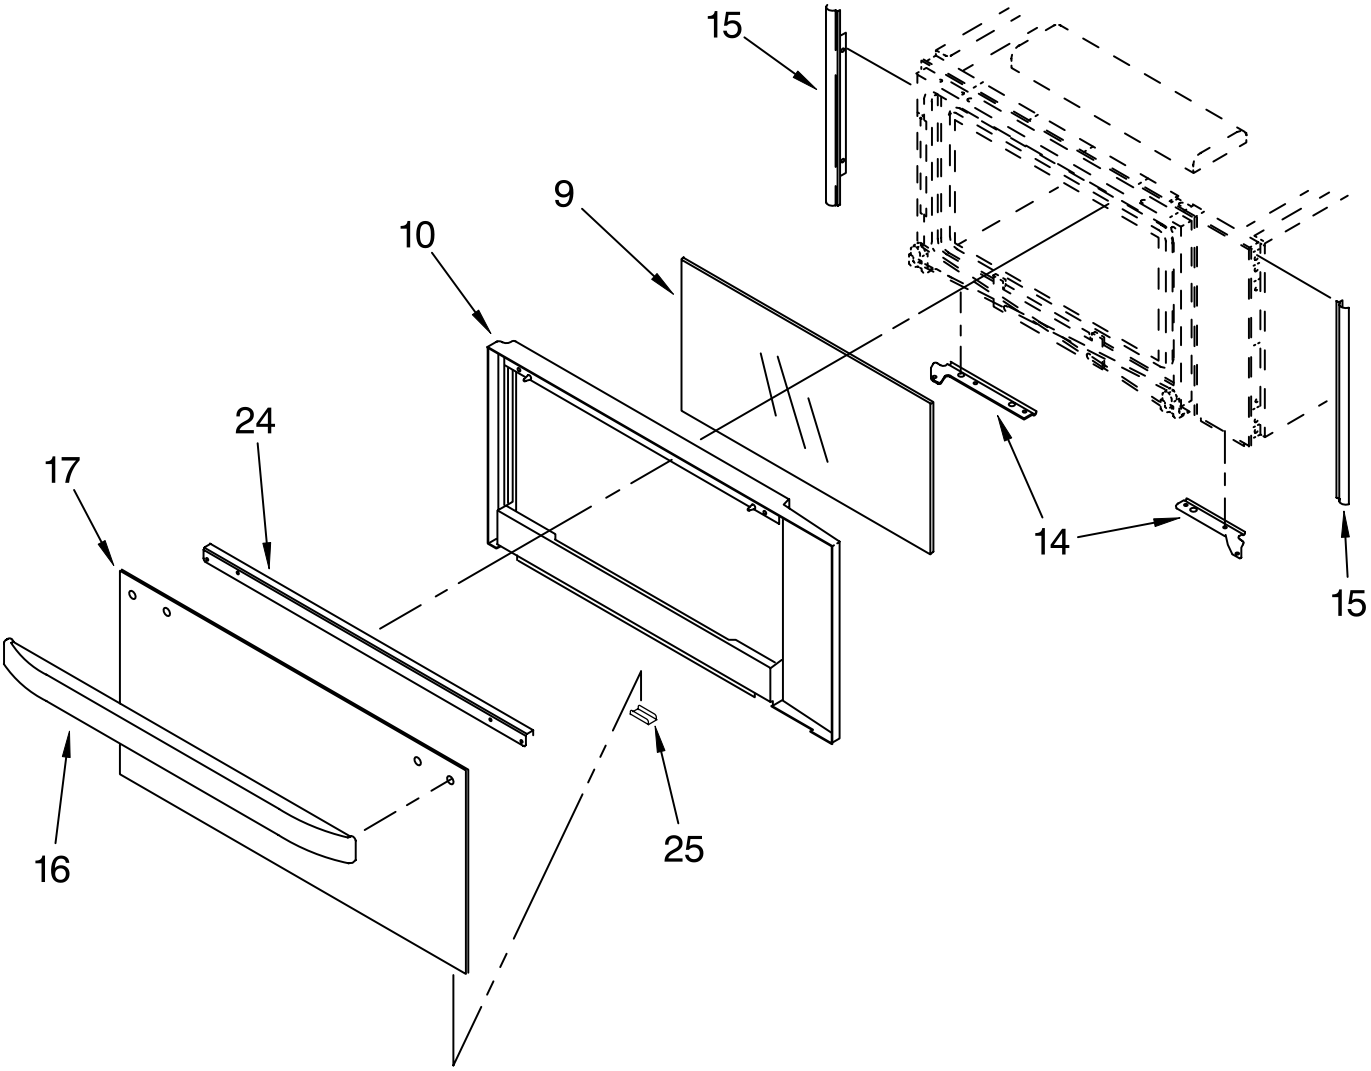

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
9	4448937	Glass, Middle
10	4450946	Frame, Door
	4450038	Screw
14		Bracket, Mounting
	4449141	Right Side
	4449142	Left Side
	4449809	Screw
15		Filler, Side
	4449083	Right Side
	4449086	Left Side
	4449809	Screw
16		Handle, Door
	4448854	Black
	4448855	White
	4448856	Biscuit
17		Glass, Outer
	4450382	Black
	4451220	White
	4452862	Biscuit
	4452471	Black Stainless
24	4452331	Bracket, Handle
	4451040	Screw
25		Retainer, Glass−Clip
	4450863	Black & Biscuit Models
	4450864	White
	4451432	Black Stainless

TOP VENTING PARTS

For Models:GSC308PJB4, GSC308PJQ4, GSC308PJT4, GSC308PJS4
(Black) (White) (Biscuit) (Black Stainless)

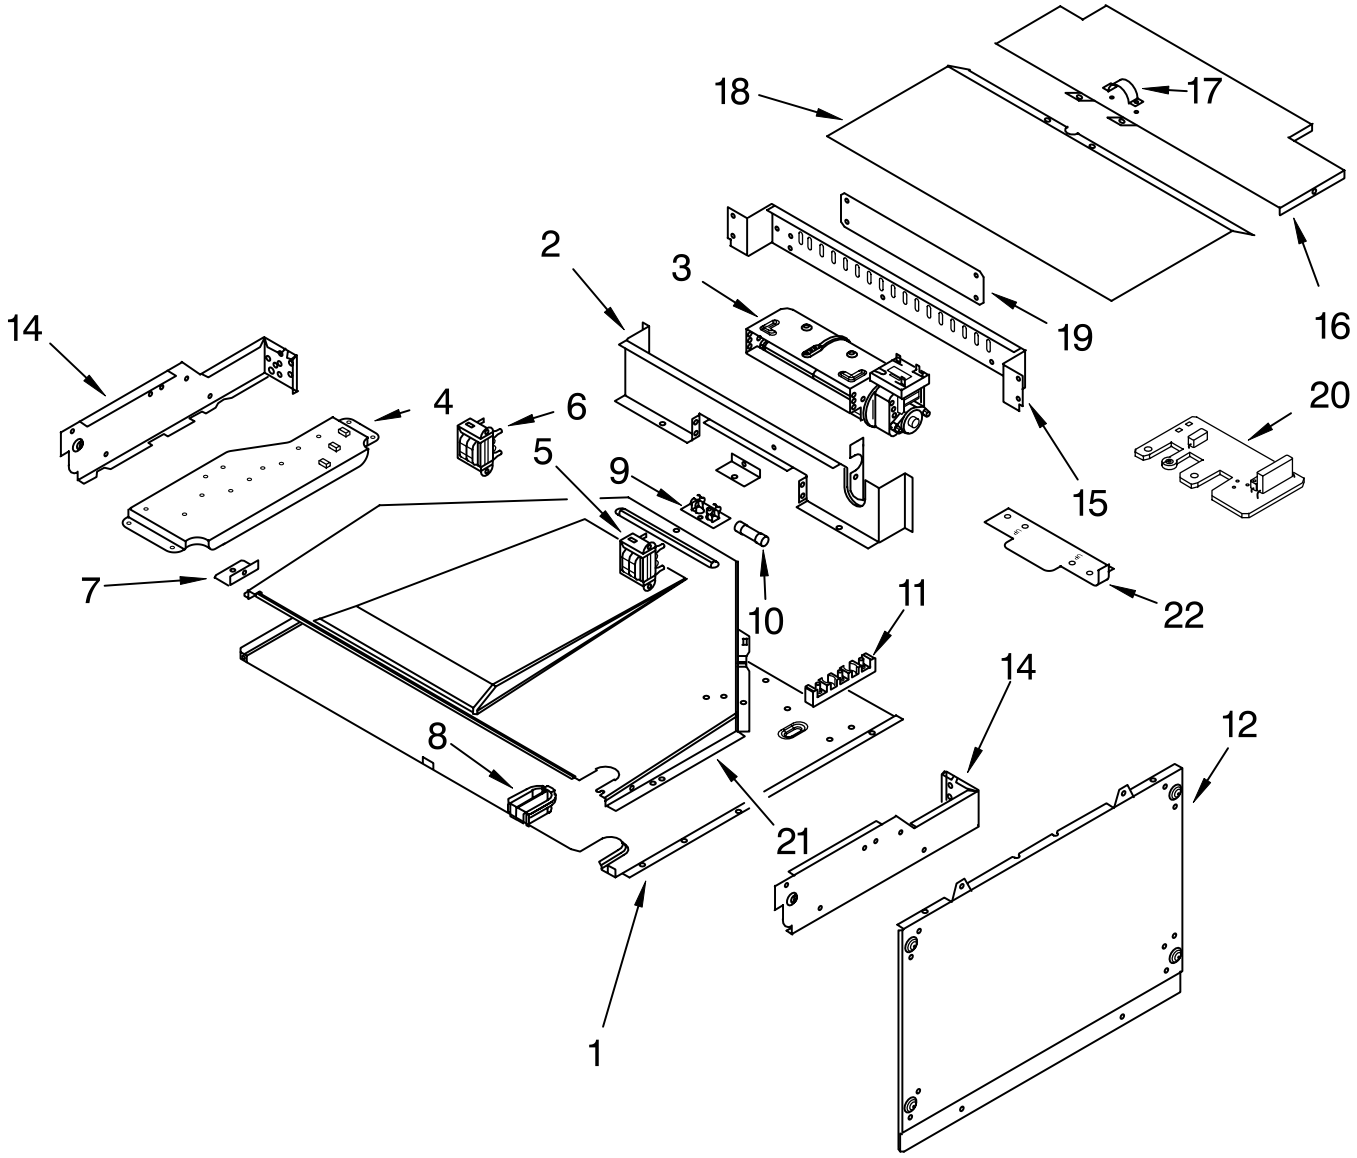

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1	4450378	Cover, Top
	4450118	Nut
	4449809	Screw
2	4448935	Baffle, Blower
3	4450920	Blower
	4449809	Screw
4	4451789	Plate, Mounting
5	6610122	Transformer, (Lights)
	4449809	Screw
6	4455038	Transformer, Control
7	4450027	Bracket, Duct
	4449809	Screw
8	4449964	Grommet
	4449809	Screw
	112432	Nut
9	4454949	Holder, Fuse
	4449154	Screw
10	4454976	Fuse
11	4449868	Block, Terminal
	4449154	Screw
12	4452559	Side, Combo
	4449809	Screw
14		Side, Control Top
	4451597	Right
	4451598	Left
	4449809	Screw
15	4452244	Back, Control
	4449809	Screw
16	4450551	Cover, Top Rear
	4449809	Screw
17	4448664	Clamp
	4449809	Screw
18	4452367	Cover, Top Front
	4449809	Screw
19	4452247	Plate, Cover
	4449809	Screw
20	4451934	Suppressor
21	4451634	Duct, Exhaust
22	4455191	Plate, Service

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models:GSC308PJB4, GSC308PJQ4, GSC308PJT4, GSC308PJS4
(Black) (White) (Biscuit) (Black Stainless)

Illus. No.	Part No.	DESCRIPTION
		PAINT, TOUCH−UP (1/2oz.)
	72017	White
	261869	Cord Brown
	72032	Black
		PAINT, SPRAY
	350930	White
	261900	Citrine White
	830864	Black
		ADHESIVE
	591014	Adhesive Loctite (1/3 oz.)
	482338	Sealer, Silastic (3 oz.)

Illus. No.	Part No.	DESCRIPTION
		SPLICING WIRES−−25FT. LENGTH
	242828	Wire (12 Ga. 150 C Black)
	242820	Wire(14 Ga. 150 C Black)
	242821	Wire (14 Ga. 150 C Blue)
	242822	Wire (14 Ga. 150 C Brown)
	242830	Wire (14 Ga. 200 C Brown)
	242823	Wire (14 Ga. 150 C Green)
	242824	Wire (14 Ga. 150 C Orange)
	242829	Wire (12 Ga. 150 C Red)
	242825	Wire (14 Ga. 150 C Red)
	242831	Wire (14 Ga. 200 C Red)
	242826	Wire (14 Ga. 150 C White)
	242827	Wire (14 Ga. 150 C Yellow)
	242832	Wire (14 Ga. 200 C Yellow)

Illus. No.	Part No.	DESCRIPTION
		FOLLOWING PARTS NOT ILLUSTRATED
	4378944	Filler Kit (Bl)
	4378945	Filler Kit (Wh)
	4378946	Filler Kit (Al)
	814381	Kit, Pin Hinge
	4448950	Screw, Installation
		WIRING HARNESS PARTS
	4452239	Harness, Latch
	4455741	Harness, Main
	4450831	Grown (M/W)
	4450800	Screw
	4449809	Screw
	4450950	Conduit, Combo
	313438	Clip, Harness
	4452222	Spacer, Harness
	4454835	Tie, Cable
	4452400	Ground Lead